

ASSEMBLY AND OPERATING INSTRUCTIONS
MODEL #4

ASSEMBLY:

Remove wing nuts from tie rods (a). Place tie rods (a) through holes (c) in base (b). Remove cover from pail of material. Place pail on base (b) making sure pail fits flush on base. Place pump assembly on top of pail and place piston assembly on material in pail. By holding latch (h) down, bridge assembly (m) can be pushed down so that grooves(k) fit down snug on rim of pail.....(be sure to guide tie rods (a) through holes (g) on each end of bridge casting). Secure with wing nuts. Press handle (j) down slowly until outlet is filled with material. NOTE: Pressure can be released immediately as follows: While pressure is on handle (j), press latch (h) down, release handle (j).....then release latch (h).


OPERATION:

After removing caulking gun nozzle cap, make sure follower rod in caulking gun is completely compressed and released from ratchet mechanism. Secure caulking gun cylinder into extension outlet of loader pump.

Press handle (j) down two to three times until follower rod of caulking gun is completely extended. The caulking gun is then loaded. While pressure is still on handle (j), press latch (h) down and release handle (j) completely.....then release latch (h). This will relieve all pressure. Remove caulking gun and assemble nozzle cap.

When container is empty, remove bridge assembly (m) from tie rods (a). (By pressing latch (h) down, bridge assembly will slide up or down piston pipe (e) freely). Pull piston pipe (e) to one side to release vacuum in pail. Piston assembly can then be raised easily out of pail.


Periodically rub coal tar or suitable lubricant on inside of caulking gun cylinder, and also to outside of neoprene seal on piston assembly of loader for easy operation and lubrication purposes.

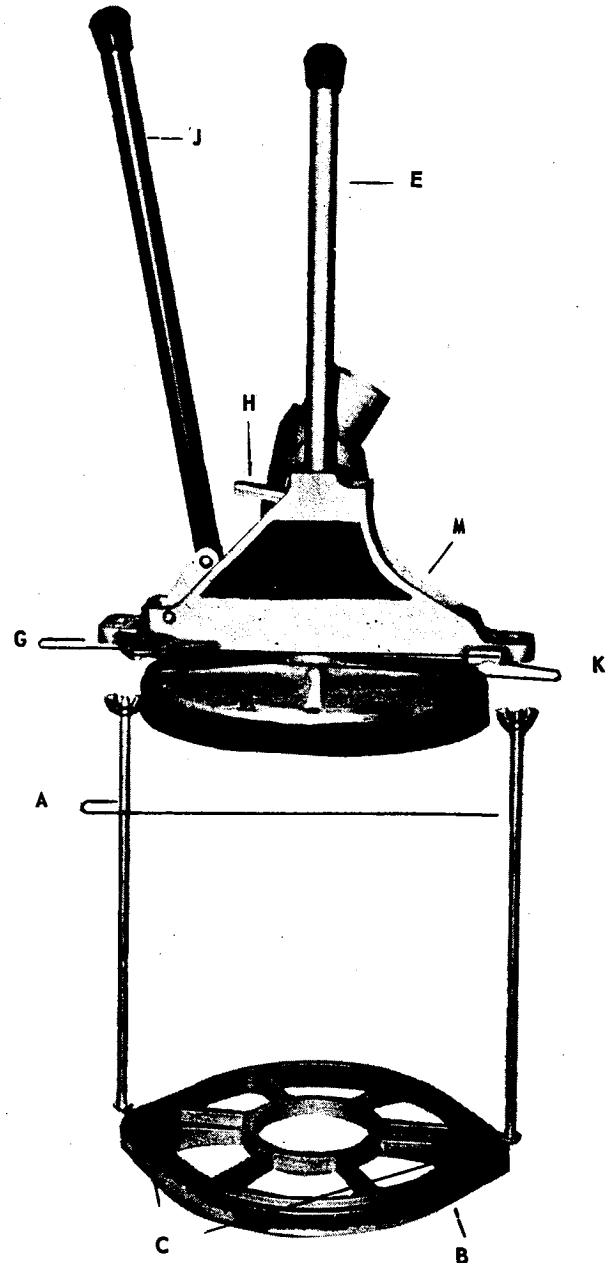

PARTS LIST

MODEL 4

LOADER

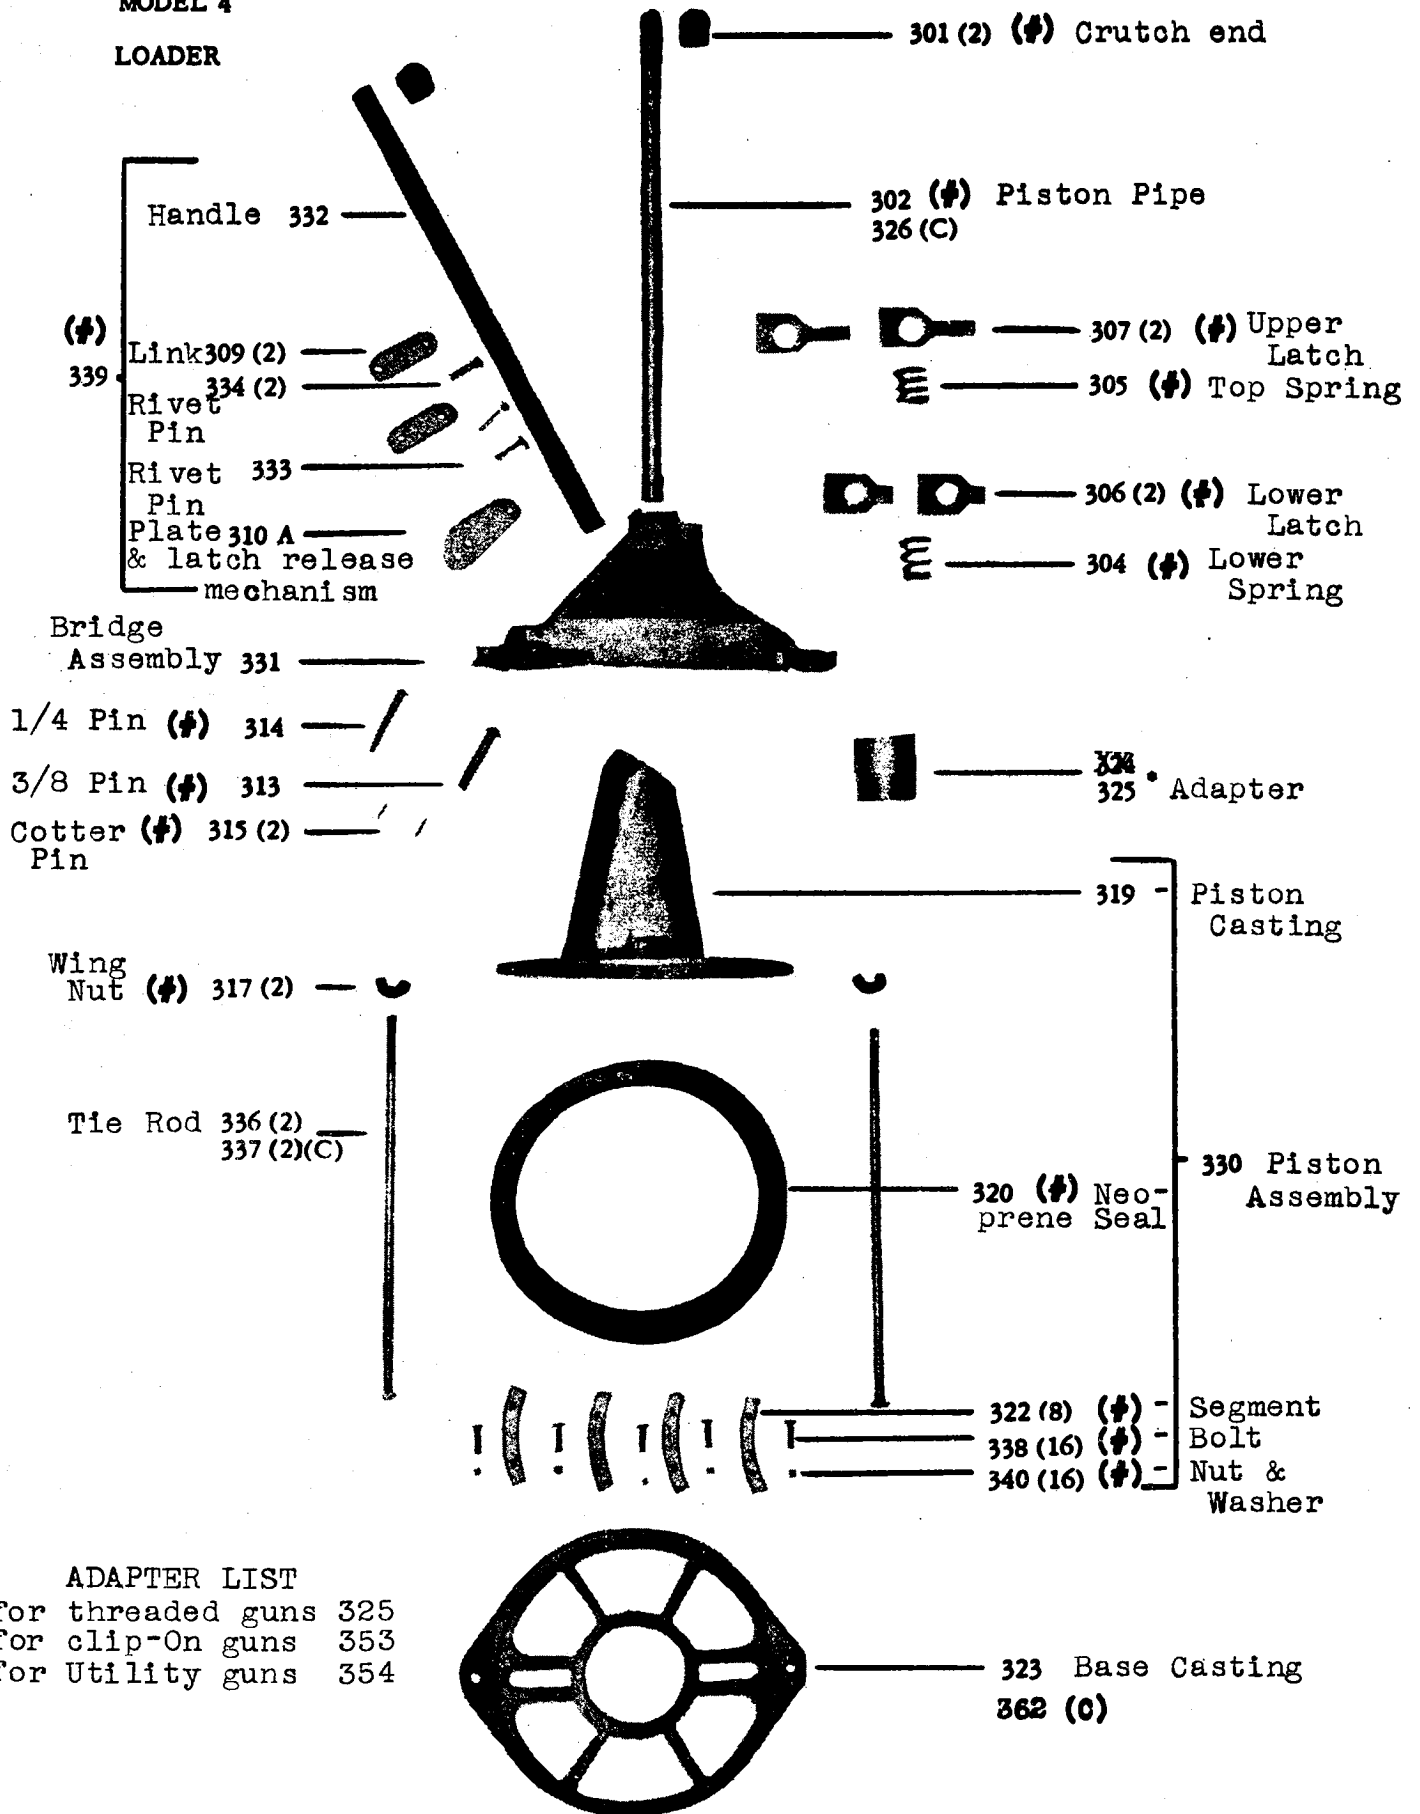

ADAPTER LIST

for threaded guns 325
for clip-On guns 353
for Utility guns 354

(C) Canadian
* Special thread adapters available

(Φ) Parts contained in 363 repair kit