

SPECIAL DELUXE DRIVE ASSEMBLY INSTRUCTIONS

The Best Just Keeps Gettin' Better!®

✓ Bulk

✓ Sausage

✓ Cartridge

✓ Multi-Component

✓ Accessories




PLEASE WEAR SAFETY GLASSES WHEN ASSEMBLING, AS SPRINGS MAY BECOME DISLODGED AND CAUSE INJURY.

Before assembly, place grease onto trigger area where grip plate contact occurs. Lubricate rod with light weight oil such as 10wt or 3-in-one oil.

Tools needed: Flat head screw driver and safety glasses.



STEP 1: Insert rod thru recoil and small spring, then into the first handle hole.

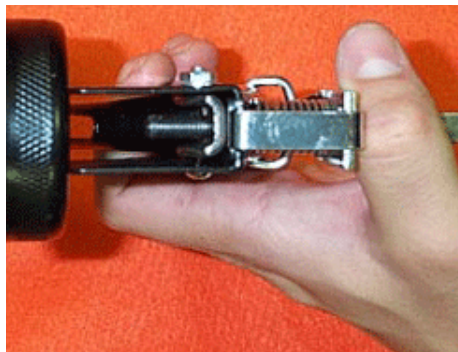

STEP 2: Insert gripping plates onto rod, make sure rod sticks thru gripper plate about 1/4".



STEP 3: Place spring onto rod, making sure trigger is forward. Please screwdriver behind first coil of spring.



STEP 4: While Compressing spring with screwdriver push down.



STEP 5: Slide spring into position. Make sure the spring is centered in the handle hole, the push the rod forward. Remove the screwdriver and push rod thru 2nd handle hole.



STEP 6: Make final adjustments to the adjustment screw for smooth operation.



1250 N Church St., Moorestown, NJ 08057 | 856.235.6688 | Service@albioneng.com | www.albioneng.com

202203